

OptiMate 3+ LED PANEL INDICATIONS

Numbering as per instruction manual.
CHARGING STARTS AT 3 AND PROGRESSES TO 5,6.

